


7. Fit inner panel to outer shell.


NOTE:- The locking rod is only fitted to the passenger door.

Bend the operating and locking rods as shown below:-

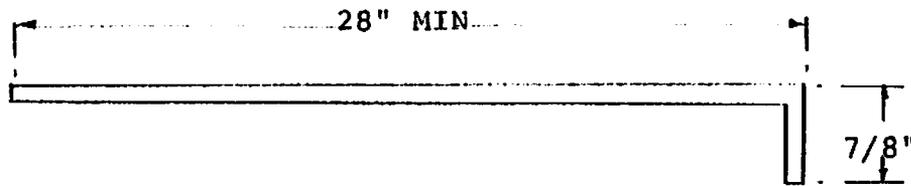


Place the inner panel over the outer shell and clear the area around the latch so that the inner panel fits flush to the inner flange at the outer shell.

Place the inner panel over the outer shell and drill 2 number 1/8" location holes in the portion shown below:-

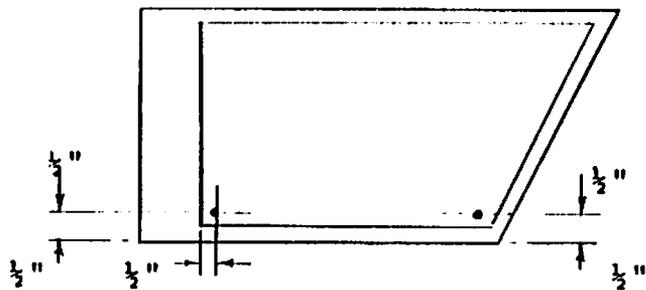

Fit the 2 rods (1 R.H.) into the inner door handle as shown below:-

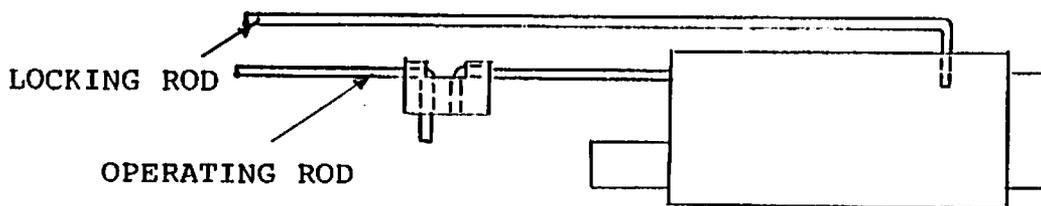

Replace the inner panel over the outer shell and use 2 pop rivets to locate. Lifting edge "A" and looking in direction "A" mark rods. Remove bend and fit clips. Check operation of doors. Secure inner panel to outer shell using 10 No. 1/8" diameter, 1/2" long aluminium pop rivets.

The doors are now ready to fit to the car.